

ATC-RELATED DIAGNOSTIC TROUBLE CODES	
BODY DIAGNOSTIC TROUBLE CODE (DTC)	DESCRIPTION
B0126	Right Panel Discharge Temperature Fault
B0130	Air Temperature/Mode Door Actuator Malfunction
B0131	Right Heater Discharge Temperature Fault
B0145	Auxiliary HVAC Actuator Circuit
B0159	Outside Air Temperature Sensor Circuit Range/Performance
B0160/B0162	Ambient Air Temperature Sensor Circuit
B0164	Passenger Compartment Temperature Sensor #1 (Single Sensor or LH) Circuit Range/Performance
B0169	In-Vehicle Temp Sensor Failure (passenger—not used)
B0174	Output Air Temperature Sensor #1 (Upper Single or LH) Circuit Range/Performance
B0179	Output Air Temperature Sensor #2 (Lower Single or LH) Circuit Range/Performance
B0183	Sun Load Sensor Circuit
B0184	Solar Load Sensor #1 Circuit Range (sun load)
B0188	Sun Load Sensor Circuit
B0189	Solar Load Sensor #2 Circuit Range (sun load)
B0229	HVAC Actuator Circuit
B0248	Mode Door Inoperative Error
B0249	Heater/Defrost/AC Door Range Error
B0263	HVAC Actuator Circuit
B0268	Air/Inlet Door Inoperative Error
B0269	Air Inlet Door Range Error
B0408	Temperature Control #1 (Main/Front) Circuit Malfunction
B0409	Air Mix Door #1 Range Error
B0414	Air Temperature/Mode Door Actuator Malfunction
B0418	HVAC Actuator Circuit
B0419	Air Mix Door #2 Range Error
B0423	Air Mix Door #2 Inoperative Error
B0424	Air Temperature/Mode Door Actuator Malfunction
B0428	Air Mix Door #3 Inoperative Error